

DRUM AUTO PUMP

SIPHON-TYPE

Especially DRUM-PUMP is very handy for pumping any kinds of liquid from large drum to handy can.

DESCRIPTION


- This siphon pump is made of Polyethylene that will not rust.
- This siphon pump is made for use of transferring water, light oil and non aggressive liquid which are compatible with Polyethylene only to transfer from upper container to lower container.

CAUTIONS

- DO NOT use this pump for HOT WATER.
- DO NOT use this pump for transferring the following liquids;
ACETON, BENZEN, CREOSOL, ETHYL, PHENOL, METHYL ETHYL
Concentrated CAUSTIC SODA LIQUID, NITRIC ACID, HYDROCHLORIC ACID, SULFURIC ACID, etc.
- This above liquids may cause decay, deterioration of mechanical strength by absorption or an appearance of circumstantial crack. This may be DANGEROUS and HARMFUL to you.

INSTRUCTIONS

1. Place the suction pipe into supply container opening.
2. Place the outlet of the delivery hose into receiving container opening.
3. Grip handle, pressing down repeatedly until liquid begins to flow. Liquid will continue flowing through delivery hose as long as the level of contents of the supply container, is higher than that of the receiving container.

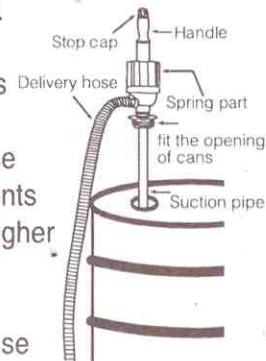

4. If siphon action stops because the level in the supply container is very low, grip handle, pressing down repeatedly or raise the supply container so it is above receiving container.
5. To stop siphon flow at any time, unscrew the stop cap at the top of the grip. To start flow, close the stop cap and repeat step 3.